



EARTH-FAULT AND SHORT-CIRCUIT INDICATOR TYPE EKL3.2

panel mounted

General description

The earth-fault and short-circuit indicator can be used in radial networks with one input and open-ring networks which are solidly earthed or low resistance earthed.

The potential-free connection between the short-circuit sensors and the display unit is done by fibre optic cables. The sensors can be mounted on screened and unscreened cables.

The connection between the earth-fault sensor and the display unit is done by cable. The sensor must be mounted on screened cables. All sensors are divisible and can be retrofitted on the cable.



Features and Options

Permanent earth-faults:

Separate response delays:

Optional two relays:

Optional reset input: Optional sensor reset: Optional power supplies: Indication of permanent earth-faults by double blinking of the earthfault LED.

2nd short-circuit pass-through: Indication of a second short-circuit passing through by double blinking of the respective short-circuit LED.

> The response delay for short-circuits and earth-faults can be adjusted individually.

> The indicator can be equipped with two remote contact relays to indicate earth-faults and short-circuits separately.

For reset by recovering auxiliary voltage supply (V DC or V AC) Sensor reset on recovering net current

10-110 V DC or 110 / 230 V AC power supply with optional lithium backup battery

External connectors

- Optical terminal: short-circuit sensors L1, L2 and L3 Connector 7 - 8: earth-fault sensor Connector 9 - 10: external blinking lamp (Type BL4.1+BL6) Connector 10 - 11: Remote reset input
- Connector 13 15: SCADA change-over contact (figure 1)

Connector 16 - 17: external power supply

Optional two relays (figure 2):

Connector 12 - 13: SCADA remote contact for short-circuit Connector 14 - 15: SCADA remote contact for earth-fault





figure 2 - Connectors two relay version



DATA SHEET

General Data

Subject	Value
short-circuit trip current (phase to phase)	adjustable: 200 / 300 / 400 / 500 / 600 / 800 / 1000 * A (±10 %)
earth-fault trip current (phase to ground)	adjustable: 10 / 20 / 40 / 60 / 80 / 100 * A (±10 %)
response delay short-circuit	adjustable: 40 / 60 / 80 / 160 * ms
response delay earth-fault	adjustable: 40 / 60 / 80 / 160 * ms
indication unit	suitable for panel installation
indication of a) short-circuit b) earth-fault c) battery	a) one red LED for each phase b) one red LED for earth-fault c) one yellow LED
reset of the indicator	a) manual by push-button b) connection for a potential-free remote reset c) time*: 1 / 2 / 4 / 8 (+/-1%) hours after fault Optional: d) self-acting after recovering of 230 V AC Optional: e) sensor reset after recovering net current
on site function test a) function test b) battery test	by push-button a) the button has to be pressed for 1 second b) the button has to be pressed for 3 seconds
dimensions: indication unit	(WxHxD) 97 mm x 48 mm x 77 mm (dimensions of the cut out: 92+0.8 x 45+0.6 mm / IEC 61554 / DIN43700)
Protection class: indication unit	IP40
Protection class: sensors	IP67
internal type test	according to IEEE 495-2007
operation temperature range	-25°C to +70°C
power supply	lithium battery (LiSOCl2) type AA / 3.6V / 2600 mAh Optional: 10-110 V DC with lithium backup battery type AA / 3.6V / 2600 mAh Optional: 110 / 230 V AC with lithium backup battery type AA / 3.6V / 2600 mAh
SCADA contact	1x change-over contact Optional: 2x NO (separate earth-fault and short-circuit indication) permanent / wipe contact (100ms) (can be selected on site by a dip switch) max. 230 V AC / max. 2 A / max. 30 W
short-circuit sensor (CT)	three short circuit sensors type LK (current transformers for single-core cable) diameter: 22-42* mm connection cable length: 3* m (fibre optic cable)
earth-fault sensor (CT)	one earth-fault sensor type SE (current transformers for a three-core cable) diameter: 80-100* mm connection cable length: 3* m (copper cable)

*PLEASE NOTE: other values can be ordered



DATA SHEET



ELEKTRO-MECHANIK EM GMBH Ringstr. 4 - D-42553 Velbert / Germany Tel: +49 2053 422890 - Fax: +49 2053 422899

www.emg-ger.com

Document Rev. 8 Page 3

ELEKTRO-MECHANIK



DATA SHEET

Short-circuit sensor type LK



12.1424.10

ELEKTRO-MECHANIK EM GMBH Ringstr. 4 - D-42553 Velbert / Germany Tel: +49 2053 422890 - Fax: +49 2053 422899 www.emg-ger.com

Document Rev. 8 Page 4

ELEKTRO-MECHANIK





Earth-fault sensor type SE



Verbindungskabel/connection cable:

- LIYY 2 x 0,5 mm²
- PB-free
- $-\emptyset = 5 \text{ mm}$
- length customer specific

12.1449.05

ELEKTRO-MECHANIK EM GMBH Ringstr. 4 - D-42553 Velbert / Germany Tel: +49 2053 422890 - Fax: +49 2053 422899 www.emg-ger.com

Document Rev. 8 Page 5